

サイズ (型)	テレビ型式	EEX-TVKA003	EEX-TVKA008	EEX-TVKA016	EEX-TVKA020WH	EEX-TVKA022	EEX-TVKA023	EEX-TVKA024	EEX-TVKA025	EEX-TVKA026	EEX-TVKA027	EEX-TVKA028	EEX-TVKA030	EEX-TVKA031BK	EEX-TVKA013/015	EEX-LA024/025
		32~65型	27~55型	32~65型	32~70型	42~80型	~43型	32~75型	37~70型	32~55型	55~80型	32~65型	42~100型	49型まで	43型まで	15~43型
40	LB-T401	○	○	×	×	×	○	×	×	×	×	×	×	×	○	○
	LC-40AE6	○	○	○	○	×	○	○	○	×	○	×	×	×	×	×
	LC-40AE7	○	○	○	○	×	○	×	○	×	○	×	×	×	×	×
	LC-40AJ1	○	○	○	○	×	○	○	○	○	×	×	×	×	×	×
	LC-40BH11	×	○※1	×	×	×	○※1	×	×	×	×	×	×	○	○	○
	LC-40BH30	×	○※1	×	×	×	○※1	×	×	×	×	×	×	○	○	○
	LC-40DR9	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	LC-40DS6	○	○	○	○	×	○	○	○	○	×	○	×	×	×	×
	LC-40DX2	○	×	×	○	×	×	×	×	×	×	×	×	×	×	×
	LC-40E40	○	×	○	×	×	×	×	×	×	×	×	×	×	×	×
	LC-40E9	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	LC-40G7	○	×	○	○	×	×	×	○	○	×	×	×	×	×	×
	LC-40G9	○	×	○	○	×	×	×	○	○	×	×	×	×	×	×
	LC-40H11	×	×	×	×	×	○※1	×	×	×	×	×	×	○	○	○
	LC-40H20	×	×	×	×	×	○※1	×	×	×	×	×	×	○	○	○
	LC-40H30	×	×	×	×	×	○※1	×	×	×	×	×	×	○	○	○
	LC-40H40	×	×	×	×	×	○※1	×	×	×	×	×	×	○	○	○
	LC-40H9	○	×	×	○	×	×	×	○	○	×	×	×	×	×	×
	LC-40HW10	○	×	×	○	×	×	×	○	○	×	×	×	×	×	×
	LC-40HW20	○	○	×	○	×	○	×	○	○	×	×	×	×	×	×
	LC-40HW35	○	○	×	○	×	○	×	○	○	×	×	×	×	×	×
	LC-40J10	○	×	×	○	×	×	×	○	○	×	×	×	×	×	×
	LC-40LV3	○	×	×	○	×	×	×	×	×	×	×	×	×	×	×
	LC-40LX3	○	×	×	○	×	×	×	×	×	×	×	×	×	×	×
	LC-40R30	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	LC-40S5	×	×	×	×	×	○※1	×	×	×	×	×	×	○	○	
	LC-40SE1	○	○	○	○	×	○	×	○	○	×	×	×	×	×	×
	LC-40U20	○	○	×	○	×	○	×	○	○	×	×	×	×	×	○
	LC-40U30	○	○	×	○	×	○	×	○	○	×	×	×	×	×	○
	LC-40U40	○	○	×	○	×	○	×	○	○	×	×	×	×	×	○
	LC-40U45	○	○	×	○	×	○	×	○	○	×	×	×	×	×	○
	LC-40V5	○	×	×	○	×	×	×	×	×	×	×	×	×	×	×
LC-40V7	×	×	×	○	×	×	×	×	×	×	×	×	×	×	×	
LC-40W20	○	×	×	○	×	×	×	○	○	×	×	×	×	×	○	
LC-40W35	○	×	×	×	×	×	×	×	×	×	×	×	×	×	○	
LC-40W5	○	○	○	○	×	○	○	○	○	×	×	×	×	○	○	
LC-40Z5	○	×	○	○	×	×	○	○	○	×	×	×	×	×	×	
PN-B401	○	○	○	○	×	○	○	○	○	×	○	×	○※3-3	×	×	
PN-M401	○	○	○	○	×	○	○	○	○	×	○	×	○※3-3	×	×	
37	LC-37DS5	○	○	○	○	×	○	○	○	×	○	×	×	×	×	×
	LC-37ES50	○	○	○	○	×	○	○	○	×	○	×	×	×	×	×
	LC-37EX5	○	○	○	○	×	○	○	○	×	○	×	×	×	×	×
	LC-37GS10	○	○	○	○	×	○	○	○	×	○	×	×	○※3-2	×	×
	LC-37GX3W	○	○	○	○	×	○	○	○	×	○	×	×	×	×	×
LC-37GX5	○	○	○	○	×	○	○	○	○	×	○	×	×	×	×	

サイズ (型)	テレビ型式	EEX-TVKA003	EEX-TVKA008	EEX-TVKA016	EEX-TVKA020WH	EEX-TVKA022	EEX-TVKA023	EEX-TVKA024	EEX-TVKA025	EEX-TVKA026	EEX-TVKA027	EEX-TVKA028	EEX-TVKA030	EEX-TVKA031BK	EEX-TVKA013/015	EEX-LA024/025
		32~65型	27~55型	32~65型	32~70型	42~80型	~43型	32~75型	37~70型	32~55型	55~80型	32~65型	42~100型	49型まで	43型まで	15~43型
32	2T-C32AE1	x	x	x	x	x	○※1	x	x	x	x	x	x	○	○	○
	2T-C32DE	x	x	x	x	x	○※1	x	x	x	x	x	x	○	○	○
	2T-C32EF1	x	x	x	x	x	○※1	x	x	x	x	x	x	○※3-2	○	○
	LC-32BD1	○	○	○	○	x	○	○	x	○	x	○	x	x	x	○
	LC-32BH11	x	x	x	x	x	○※1	x	x	x	x	x	x	○	○	○
	LC-32BH30	x	x	x	x	x	○※1	x	x	x	x	x	x	○	○	○
	LC-32D10	○	○	○	○	x	○	○	x	○	x	○	x	x	x	○
	LC-32D30	○	○	○	○	x	○	○	x	○	x	○	x	x	x	○
	LC-32DE5	○	○	○	○	x	○	○	x	○	x	○	x	x	○	○
	LC-32DR3	○	○	○	○	x	○	x	○	x	x	x	x	x	○	○
	LC-32DX3	○	○	○	○	x	○	x	x	○	x	x	x	x	x	○
	LC-32E40	x	x	x	x	x	○※1	x	x	x	x	x	x	x	○	○
	LC-32E7	○	○	○	○	x	○	○	x	○	x	○	x	x	x	○
	LC-32E8	○	○	○	○	x	○	○	x	○	x	○	x	○※3-2	○	○
	LC-32ES	○	○	○	○	x	○	x	x	○	x	x	x	x	x	○
	LC-32F3	○	○	○	○	x	○	x	x	○	x	x	x	x	○	○
	LC-32F5	○	○	○	○	x	○	x	x	○	x	x	x	x	○	○
	LC-32GH1	○	○	○	○	x	○	○	x	○	x	○	x	x	x	x
	LC-32H11	x	x	x	x	x	○※1	x	x	x	x	x	x	x	○	○
	LC-32H20	x	x	x	x	x	○※1	x	x	x	x	x	x	x	○	○
	LC-32H30	x	x	x	x	x	○※1	x	x	x	x	x	x	x	○	○
	LC-32H40	x	x	x	x	x	○※1	x	x	x	x	x	x	x	○	○
	LC-32H9	x	x	x	x	x	○※1	x	x	x	x	x	x	x	○	○
LC-32J10	x	x	x	x	x	○※1	x	x	x	x	x	x	x	○	○	
LC-32J9	x	x	x	x	x	○※1	x	x	x	x	x	x	x	○	○	
LC-32R30	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	
LC-32R5	○	x	○	○	x	x	x	x	○	x	x	x	x	x	x	
LC-32S5	x	○※1	x	x	x	○※1	x	x	x	x	x	x	x	○	○	
LC-32SC1	○	○	○	○	x	○	x	x	○	x	x	x	x	○※3-2	○	
LC-32V5	○	○	x	x	x	○	x	x	x	x	x	x	x	○※3-2	○	
LC-32W25	x	x	x	x	x	○※1	x	x	x	x	x	x	x	○	○	
LC-32W5	x	x	x	x	x	○※1	x	x	x	x	x	x	x	○	○	
PN-Y326	○	○	○	○	x	○	○	x	○	x	○	x	x	○※3-2	○	
24	2T-C24AD	x	x	x	x	x	○※1	x	x	x	x	x	x	○	○	○
	LC-24P5	x	x	x	x	x	○※1	x	x	x	x	x	x	○	○	○
22	2T-C22AD	x	x	x	x	x	○※1	x	x	x	x	x	x	○	○	○
	LC-22K45	x	x	x	x	x	○※1	x	x	x	x	x	x	○	○	○
19	2T-C19AD	x	x	x	x	x	○※1	x	x	x	x	x	x	○	○	○
	LC-19P5	x	x	x	x	x	○※1	x	x	x	x	x	x	○	○	○

※1 ネジが付属しておりません
取り付けネジが別途必要です。(M4など)

※2 縦向き設置のみ可能

※3-2 別途変換金具 EEX-VESATF02 が必要です
テレビを取付のネジは別途必要な場合があります。

※3-3 別途変換金具 EEX-VESATF03 が必要です
テレビを取付のネジは別途必要な場合があります。